



Electronic Guitar Instruction Manual

Congratulations on your new guitar!
Please read this guide carefully before you begin playing.

Before You Play

Install Batteries

Always ask an adult to install the batteries for you.

This guitar uses 3 size AA (1.5 V) batteries (not included).

Loosen the screw on the battery compartment door with a Phillips head screwdriver. Open the compartment and install the batteries, paying close attention to the negative (-) and positive (+) ends of the battery to be sure they are placed correctly. Incorrect installation of batteries can damage the guitar or cause an electrical hazard. Close the battery door and tighten the screw.

Note: If the batteries start to wear out, the guitar's sound may deteriorate. If this happens, install a new set of batteries. If you are not going to play for a long time, remove the batteries from the guitar.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.

Important Safety Instructions

Please read this section carefully.

Read and follow these instructions.

1. Do not use this device near water.
2. Clean only with a dry cloth.
3. Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
4. Refer all servicing to qualified service personnel. Servicing is required when the drums have been damaged in any way, such as when liquid has been spilled on the drum, the drum has been exposed to rain or moisture, does not operate normally, or have been dropped.
5. To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the drum pad carefully to avoid damage to outer covering and inner components.

The drum pad should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Playing The Guitar

1. Power (OFF V+ V-)

Switch the OFF V+ V- button to V+ or V- to switch the guitar on. (V+ means more volume. V- means less volume.) Once the power is on, the guitar is in Chord mode. To switch the guitar off, switch the button to OFF.

2. Style

Press the STYLE key to select the style you want (electronic jazz or finger bass). When you press the STYLE key, you will hear a sample of the style.

3. Rhythm

Press the RHYTHM button to select from 6 different rhythm styles. You will hear a sample of each rhythm as you press the key.

4. Chord

Press the CHORD button to select from 4 pre-set tunes. Press any of the fret to buttons play the pre-set tune, and press any string key to play a funny sound effect. This is called Chord mode.

5. String

Press the STRING button to switch to string mode. In string mode, each fret button will play a single string sound. (See Fret Board table below.)

6. Pattern

Press the PATTERN button to create your own patterns. Press the PATTERN button, then press and hold any fret key, then press any string key and it will play the notes on the fretboard just like a real guitar.

7. Stop

Press STOP to stop the rhythm at any time.

8. String Buttons (S1-S6)


Press the STRING buttons S1 - S6 to hear funny sound effects.

9. Fret Buttons

Press the FRET buttons 1-12 to hear pre-set tunes or to play notes. (See Fret Board table below.)

10. Tempo Up/Down

Press the TEMPO UP/DOWN buttons to make the music slower or faster.

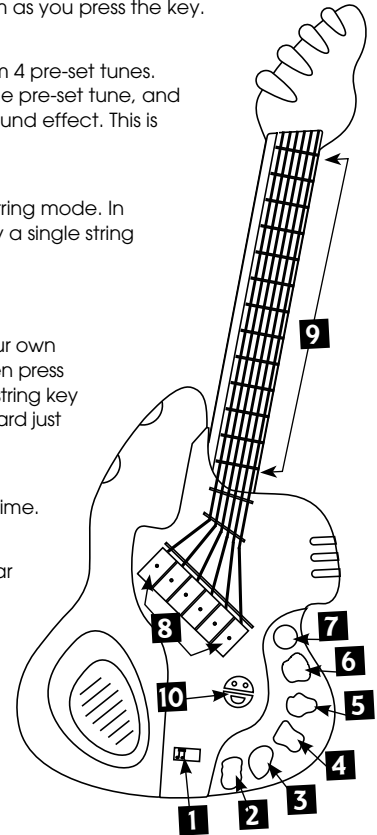

The Fret Board table below shows what notes you can play in String mode, when you press a string button (S1-S6) and a fret button (1-12).

| (Fret Board Table) | | | | | | | | | | | | | |
|--------------------|-------------------|-------------------|-------------------|-------------------|-----|-------------------|-------------------|-------------------|-------------------|-----|-------------------|-----|------------|
| (E) | (F) | (F _b) | (G) | (G _A) | (A) | (A _B) | (B) | (C) | (C _b) | (D) | (D _E) | (E) | S1 |
| (B) | (C) | (C _b) | (D) | (D _E) | (E) | (F) | (F _G) | (G) | (G _A) | (A) | (A _B) | (B) | S2 |
| (G) | (G _A) | (A) | (A _B) | (B) | (C) | (C _b) | (D) | (D _E) | (E) | (F) | (F _G) | (G) | S3 |
| (D) | (D _E) | (E) | (F) | (F _b) | (G) | (G _A) | (A) | (A _B) | (B) | (C) | (C _b) | (D) | S4 |
| (A) | (A _B) | (B) | (C) | (C _b) | (D) | (D _E) | (E) | (F) | (F _G) | (G) | (G _A) | (A) | S5 |
| (E) | (F) | (F _G) | (G) | (G _A) | (A) | (A _B) | (B) | (C) | (C _b) | (D) | (D _E) | (E) | S6 |
| Nut | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | String Key |

Customer Assistance

Phone: 888.551.1115
Email: info@firstact.com

First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com

Nick.com
© 2009 Viacom International Inc.
All Rights Reserved.

Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.

No part of this publication may be reproduced in any form or by any means without the prior written permission of the Publisher.

Colors and specifications depicted on this guide may vary slightly from your product.
First Act, First Act Discovery, and the First Act Discovery logo are trademarks of First Act Inc.

© 2009 First Act Inc.
All Rights Reserved.

DE218.M.01