



Important Safety Instructions

Please read this section carefully.

Read and follow these instructions.

1. Do not use this device near water.
2. Clean only with a dry cloth.
3. Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
4. Refer all servicing to qualified service personnel. Servicing is required when the drums have been damaged in any way, such as when liquid has been spilled on the drum, the drum has been exposed to rain or moisture, does not operate normally, or have been dropped.
5. To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Electronic Bongos Instruction Manual

Before You Play

Install Batteries

Batteries required: 4 x "AA" size (not included)

To Replace Batteries

1. Open the battery compartment cover with a screwdriver. Place the batteries in the compartment, be sure that (+) & (-) are in the correct positions.
2. Batteries must always be replaced by an adult. Never let a child use this product unless the battery door is secured.
3. Keep batteries away from small children.
4. Immediately and safely dispose of all used batteries.

Attention

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the drum pad carefully to avoid damage to outer covering and inner components.


The drum pad should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Playing The Bongos

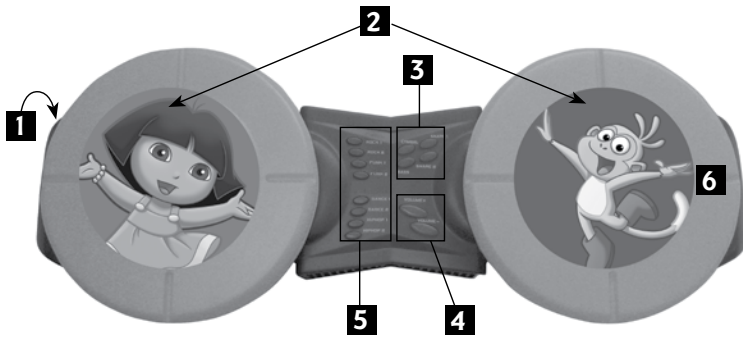

1. On/Off

Switch On to play. Switch Off to turn power off. The On/Off switch is located on the bottom panel of the bongos.

2. Bongos

Tap a bongo to trigger a drum sound.

3. Drum Sounds

To select a drum sound, press a drum sound button and then tap a bongo to assign the sound to that bongo.

4. Drum Volume +/-

Press Drum Volume + button to increase drum pad volume. Press Drum Volume button to decrease drum pad volume.

5. Rhythm Buttons

Press Rhythm Selection buttons to select from 8 different rhythms. Tap the bongos to play along to the rhythm.

6. Speaker

Customer Assistance

Phone: 888.551.1115

Email: info@firstact.com

First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com

Nick.com
© 2009 Viacom International Inc.
All Rights Reserved.

Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.

No part of this publication may be reproduced in any form or by any means without the prior written permission of the Publisher.

Colors and specifications depicted on this guide may vary slightly from your product.

First Act, First Act Discovery, and the First Act Discovery logo are trademarks of First Act Inc.

© 2009 First Act Inc.
All Rights Reserved.

DE324.M.01