 


# DIGITAL DRUM PAD

## INSTRUCTION MANUAL

*Congratulations on your new drum pad!*

Please read this guide carefully before you begin playing.

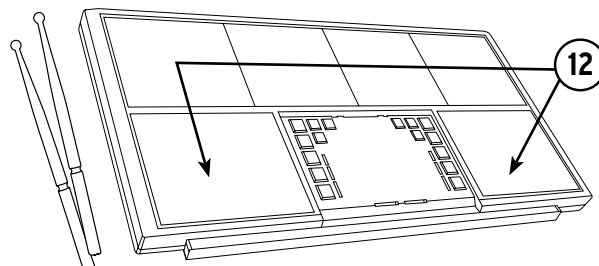

### BEFORE YOU PLAY


#### INSTALL BATTERIES

This drum pad uses 5 size AA batteries (not included).

Use a Philips head screwdriver to open the battery compartment.

Refer to the image on the compartment door for proper installation; pay close attention to the negative (-) and positive (+) ends of the battery to be sure they are placed correctly. Incorrect installation of batteries can damage the drum pad or cause an electrical hazard.

Note: If you are not going to play for a long time, remove the batteries from the drum pad. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

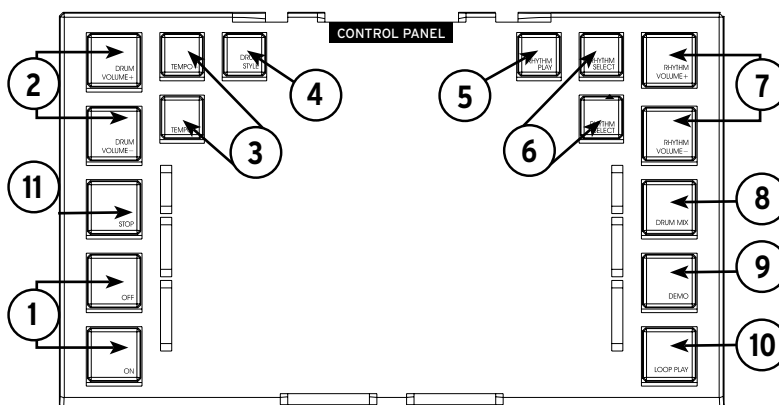

#### MP3 PLAYER (OPTIONAL)


To use an MP3 player (not included), insert 1/8" connector here.

#### HEADPHONE (OPTIONAL)

To use headphones (not included), insert a 1/8" headphone plug into the jack labeled HEADPHONE on the rear of the drum pad. When you plug into this jack, the speaker will shut off so you can practice in private.

#### FOOT PEDAL

Plug the foot pedal into the jack labeled PEDAL on the rear of the drum pad. This pedal functions like one of the drum pads, with a kick drum sound. On an acoustic drum kit a kick drum is placed on the floor and played with a pedal.

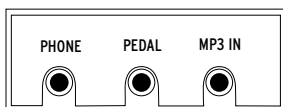

#### 1. ON/OFF

Press ON and OFF buttons to turn power ON and OFF.

#### 2. DRUM VOLUME +/-

Press VOLUME +/- buttons to adjust the volume of the drum pads.

#### 3. TEMPO +/-

Press TEMPO +/- buttons to adjust the tempo.

#### 4. DRUM STYLE (4 KITS)

Press DRUM STYLE button to choose from 4 different drum styles (Disco, Pop, Rock, R&B).

#### 5. RHYTHM PLAY

Press RHYTHM PLAY button to play selected rhythms.

#### 6. RHYTHM SELECTION (16 RHYTHMS)

Press RHYTHM SELECTION buttons to scroll through the 16 different rhythms.

- |                  |                 |               |                 |
|------------------|-----------------|---------------|-----------------|
| 1. Wah-Wah       | 5. Funky Time   | 9. New Wave   | 13. Soft Jazz 2 |
| 2. Hardcore      | 6. Piano Jazz   | 10. Hard Rock | 14. Blues Rock  |
| 3. Boogie Woogie | 7. Smooth R & B | 11. Club Mix  | 15. Moving On   |
| 4. Classic Rock  | 8. Tango        | 12. Sci Fi    | 16. Get On Up   |

*\*Play drums along with the rhythms.*

#### 7. RHYTHM VOLUME +/-

Press RHYTHM VOLUME +/- buttons to adjust the rhythm volume.

#### 8. DRUM MIX

Press DRUM MIX to add pre-programmed drums to each rhythm track.

#### 9. DEMO

Press DEMO button to play a demo song. Press the button again to advance to the next song.

#### 10. LOOP PLAY (6 LOOPS)

This mode will play non-stop rhythm loops for you to play along with. Once you hit a drum pad, the music begins. Hit another drum pad to change the rhythm. Press STOP to stop the music.

#### 11. STOP

Press STOP to stop the music.

#### 12. DRUM PADS

Strike these pads to play drums.

---

## IMPORTANT SAFETY INSTRUCTIONS

### PLEASE READ THIS SECTION CAREFULLY

#### WARNINGS

1. Do not change any parts without professional instructions. Any change may cause malfunctions.
2. Keep the wrapping bag out of the reach of children to avoid a choking hazard.
3. Always move the digital drums carefully to avoid damage to outer covering and inner components.
4. The digital drums should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

#### TO REPLACE BATTERIES

1. Open the battery compartment cover, position the batteries in the compartment and make sure that the (+) and (-) are in the correct position.
2. To ensure proper safety and operation, batteries must always be replaced by an adult. Never let a child use this product unless the battery door is secured.
3. Keep batteries away from small children. Immediately and safely dispose of all used batteries.

#### ATTENTION

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
3. Only the same or equivalent types of batteries are recommended.
4. Non rechargeable batteries are not to be recharged.
5. Rechargeable batteries (if removable) are to be removed from the product before being charged.
6. Rechargeable batteries (if removable) are only to be charged under adult supervision.
7. Exhausted batteries are to be removed from the product.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

#### IMPORTANT SAFETY INSTRUCTIONS

1. Read and follow these instructions.
2. Do not use this device near water.
3. Clean only with a dry cloth.
4. Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
5. If you use a power cord, protect it from being walked on or pinched particularly at plugs and at the point where it exits from the keyboard.
6. Only use the attachments/accessories specified by the manufacturer.
7. Unplug the keyboard during lightning storms or when unused for long periods of time.
8. Refer all servicing to qualified service personnel. Servicing is required when the digital drums have been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled on or objects have fallen into the digital drums, the digital drums have been exposed to rain or moisture, do not operate normally, or have been dropped.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### CUSTOMER ASSISTANCE

Phone: 888.551.1115  
Email: [info@firstact.com](mailto:info@firstact.com)

Colors and specifications depicted on this guide may vary slightly from your product.

First Act and the First Act logo are trademarks of First Act Inc.  
©2009 First Act Inc. All rights reserved.

MI117.M.01