



Drum Pad Instruction Manual

Congratulations on your new drum pad!
Please read this guide carefully before you begin playing.

Before You Play

Install Batteries

Always ask an adult to install the batteries for you.

This drum pad uses 4 size AA (1.5 V) batteries (not included).


Use a Philips head screwdriver to open the battery compartment door.

Install new batteries according to the image inside the door. Be sure to install negative (-) and positive (+) ends of the battery correctly. Incorrect installation can damage the drum pad or cause an electrical hazard.

Close the compartment door and tighten the screw.

Do not mix old and new batteries. Do not mix alkaline standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.

Playing The Drum

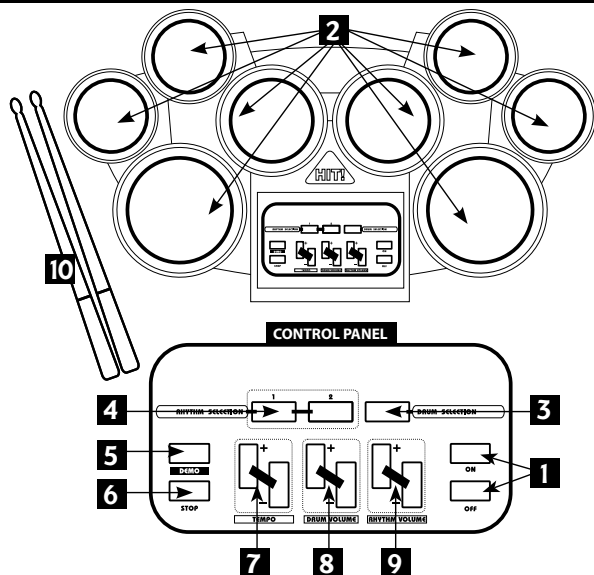

1. Power On/Off

Press ON to play - when you press ON, you will hear a short song.
Press OFF to turn power off.

2. Drum Pads

Tap drum pads to hear drum sounds.

3. Drum Selection

Press DRUM SELECTION to choose from 2 different drum modes.

4. Rhythm Selection 1 and 2

Press the RHYTHM SELECTION 1 and 2 buttons to choose from 6 rhythms. Each button has 3 rhythms to choose from.

5. Demo

Press DEMO to play the demo song.

6. Stop

Press STOP to stop the rhythm or demo song.

7. Tempo +/-

Press the TEMPO +/- buttons to speed up or slow down the tempo.

8. Drum Volume +/-

Press DRUM VOLUME +/- buttons to adjust the drum volume.

9. Rhythm Volume +/-

Press RHYTHM VOLUME +/- buttons to adjust the rhythm volume.

10. Drumsticks

Use the drumsticks to tap on the drum pads.

Important Safety Instructions

Please read this section carefully.

Read and follow these instructions.

1. Do not use this device near water.
2. Clean only with a dry cloth.
3. Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
4. Refer all servicing to qualified service personnel. Servicing is required when the drums have been damaged in any way, such as when liquid has been spilled on the drum, the drum has been exposed to rain or moisture, does not operate normally, or have been dropped.
5. To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the drum pad carefully to avoid damage to outer covering and inner components.

The drum pad should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Customer Assistance

Phone: 888.551.1115
Email: info@firstact.com

First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com

Stephen Hillenburg

Nick.com
© 2009 Viacom International Inc.
All Rights Reserved.

Nickelodeon, SpongeBob SquarePants and all related titles, logos, and characters are trademarks of Viacom International Inc.

No part of this publication may be reproduced in any form or by any means without the prior written permission of the Publisher.

Colors and specifications depicted on this guide may vary slightly from your product.

First Act, First Act Discovery, and the First Act Discovery logo are trademarks of First Act Inc.

© 2009 First Act Inc.
All Rights Reserved.

SB890.M.01