



Digital Drum Pad Instruction Manual

Congratulations on your new drum pad!
Please read this guide carefully before you begin playing.

Before You Play

Install Batteries


Always ask an adult to install the batteries for you. This drum pad uses 4 size AA (1.5 V) batteries (not included). The battery compartment is located on the bottom panel of the drum pad.

Loosen the screw on the battery compartment door with a Phillips head screwdriver. Open the door and refer to the image inside to install the batteries.

Be sure to install the negative (-) and positive (+) ends of each battery correctly. Incorrect installation can damage the drum pad or cause an electrical hazard. Close the compartment door and tighten the screw.

Note: If the batteries start to wear out, the drum pad's sound may deteriorate. If this happens, install a new set of batteries. If you are not going to play for a long time, remove the batteries from the drum pad. Do not mix old and new batteries. Do not mix alkaline standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.

Playing The Drum Pad

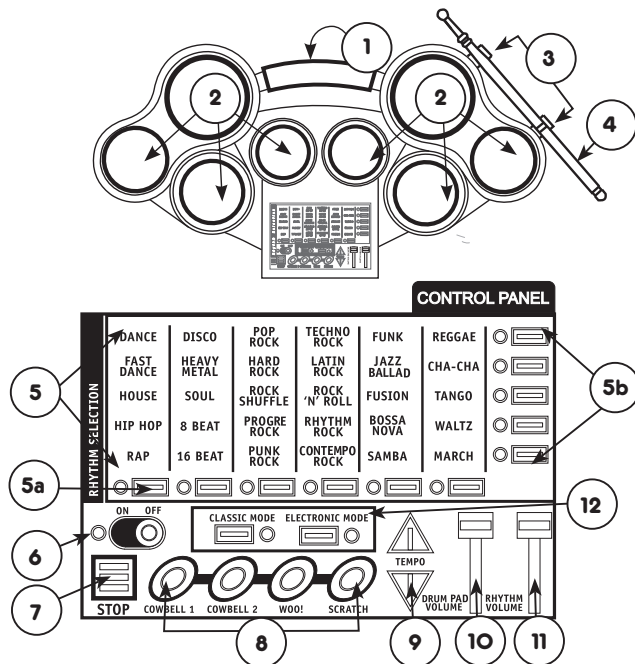

1. Demo/Play

The DEMO/PLAY switch is on the bottom panel of the drum pad. Switch to PLAY before use.

2. Drum Pads

Tap drum pads to play the drums.

3. Drumstick Holder

4. Drumsticks (2)

Use the drumsticks to tap on the drum pads.

5. Rhythm Selection

You can choose from 30 different RHYTHMS. Press the button for the row (5a), then press the button for the column (5b) to choose the rhythm you want.

Example: Press the first button on the bottom row and the top button on the side to choose the DANCE rhythm. The LEDs will indicate the buttons you have chosen.

6. On/Off

To play, switch to ON.

Playing The Drum Pad (continued)

7. Stop

Press STOP to exit any rhythm.

8. Sound Effects

These 4 sound effects can be played at any time.

9. Tempo

Press TEMPO UP/DOWN buttons to speed up or slow down the tempo.

10. Drum Pad Volume

Slide the DRUM PAD VOLUME button up or down to adjust the volume of the pads.

11. Rhythm Volume

Slide the RHYTHM VOLUME button up or down to adjust the volume of the rhythm selections.

12. Classic and Electronic Mode

Each drum pad has 2 modes. Press CLASSIC MODE for classic sounds, or press ELECTRONIC MODE for electronic sounds.

Classic Mode:	Electronic Mode:
Hi-Hats	Hi-Hats
Ride Cymbal	Ride Cymbal
Crash Cymbal	Crash Cymbal
Bass Drum	Electronic Bass Drum
Snare Drum	Electronic Snare Drum
Small Tom	Electronic Small Tom
Medium Tom	Electronic Medium Tom
Floor Tom	Electronic Floor Tom

Important Safety Instructions

Please read this section carefully.

Read and follow these instructions.

- Do not use this device near water.
- Clean only with a dry cloth.
- Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as when liquid has been spilled on it, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
- To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the product carefully to avoid damage to outer covering and inner components.

The product should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Customer Assistance

Phone: 888.551.1115
Email: info@firstact.com

First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com

Nick.com
© 2010 Viacom International Inc.
All Rights Reserved. Nickelodeon, iCarly and all related titles and logos are trademarks of Viacom International Inc.
No part of this publication may be reproduced in any form or by any means without the prior written permission of the Publisher.
Colors and specifications depicted on this guide may vary slightly from your product.
© 2010 First Act Inc.
All Rights Reserved.
IC587.M.02