

nickelodeon



KARAOKE MICROPHONE INSTRUCTION MANUAL

Congratulations on your new karaoke microphone!
Please read this guide carefully before you begin playing.

BEFORE YOU PLAY

Install Batteries

Always ask an adult to install the batteries for you. This microphone uses 3 size AA (1.5 V) batteries (not included). The battery compartment is located on the back of the microphone. Loosen the screw on the battery compartment door with a Phillips head screwdriver. Open the door and refer to the image inside to install the batteries.

Be sure to install the negative (-) and positive (+) ends of each battery correctly. Incorrect installation can damage the microphone or cause an electrical hazard. Close the compartment door and tighten the screw.

Note: If the batteries start to wear out, the microphone's sound may deteriorate. If this happens, install a new set of batteries. If you are not going to play for a long time, remove the batteries from the microphone. Do not mix old and new batteries. Do not mix alkaline standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.

PLAYING THE MICROPHONE

1. MICROPHONE GRILL

Sing or speak directly into the mic to sound your best!

2. LED

This light indicates that the mic is on.

3. BUBBLES BUTTON

Press BUBBLES button for underwater bubble sound effects!

4. CLAP BUTTON

Press CLAP button to give yourself some well-deserved applause!

5. ON/OFF/VOLUME

Turn the thumbwheel to click the mic on and off, and to adjust the volume.

6. STOP

Press STOP to stop all sounds.

7. DEMO

Press DEMO to play the first demo song.

8. PREVIOUS

Press PREVIOUS to go back to the previous demo song.

9. DEMO ALL


Press the DEMO ALL button to play a demo song. Pressing the button again will stop the song. Press it again and the next song will begin.

Your mic can play six demo songs:

- Comin' Round the Mountain
- When the Saints Go Marching In
- Twinkle, Twinkle Little Star
- Take Me Out to the Ballgame
- Home on the Range
- Are You Sleeping?

10. NEXT

Press NEXT to skip to the next demo song.

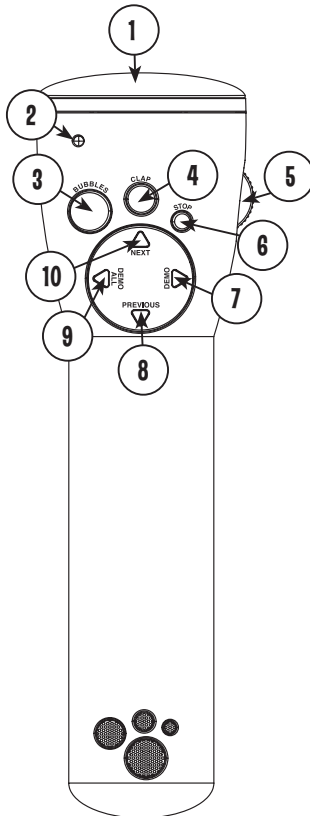

IMPORTANT SAFETY INSTRUCTIONS

Please read this section carefully.

Read and follow these instructions.

- Do not use this device near water.
- Clean only with a dry cloth.
- Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as when liquid has been spilled on it, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
- To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the product carefully to avoid damage to outer covering and inner components.

The product should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CUSTOMER ASSISTANCE

Phone: 888.551.1115
Email: info@firstact.com

First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com

Nick.com
© 2010 Viacom International Inc.
All Rights Reserved.

Nickelodeon, SpongeBob SquarePants and all related titles, logos, and characters are trademarks of Viacom International Inc.

No part of this publication may be reproduced in any form or by any means without the prior written permission of the Publisher.

Colors and specifications depicted on this guide may vary slightly from your product.

© 2010 First Act Inc.
All Rights Reserved.
SB359.M.02