



FIRST ACT

Concert Series®

FLUTE

IDEAL FOR SCHOOL MUSIC PROGRAMS™

CARE AND ASSEMBLY



INCLUDES:


Silver-Plated Flute • Protective Carrying Case
Cleaning/Tuning Rod • Cleaning Cloth • DVD

FIRST ACT CONCERT SERIES® FLUTE

Congratulations and thank you for purchasing a First Act instrument.

Please keep this care and assembly manual for future reference, as it contains important information.

If you experience any problems with your instrument, call us toll-free, rather than return it to the store. We can usually solve the problem over the telephone or send you replacement parts if necessary. Please call the First Act Service Team, toll-free at 866-710-FAST (3278) or e-mail info@firstact.com. Our experts will be happy to assist you.

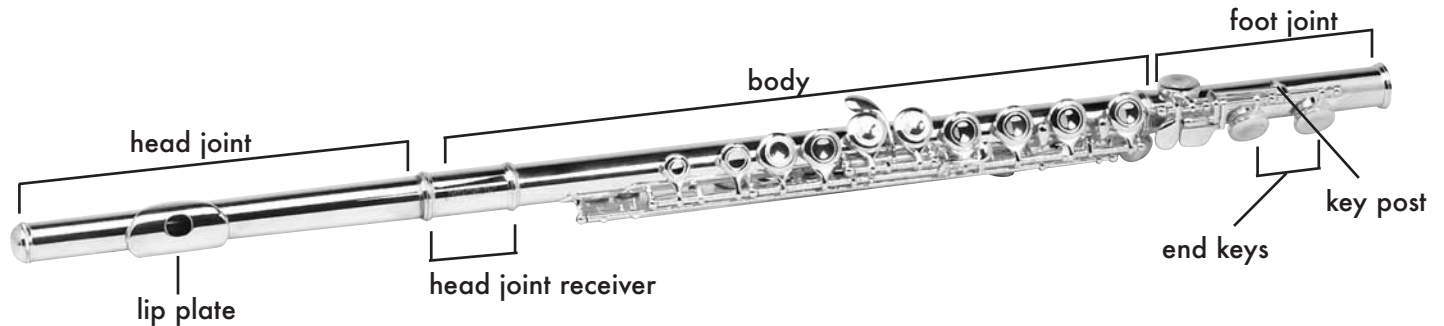

tuning rod



cleaning cloth



head joint
with tenon cover

UNPACKING YOUR FLUTE

1 Open the case with the First Act logo facing up.

2 Carefully remove any paper, plastic and silica gel packets from around the instrument.

3 Remove red plastic tabs from in between the keys.


ASSEMBLE YOUR FLUTE

- 1** Remove the tenon cover from the head joint.



- 2** Hold the head joint in your left hand, with the lip plate on the left.

- 3** Hold the body by the head joint receiver with your right hand. With a gentle twisting motion, insert the head joint tenon into the head joint receiver of the body, until it stops.

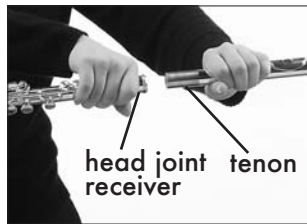

- 4** Line up the lip plate hole with the First Act logo.



- 5** Now hold the flute in your left hand at the head joint receiver.

- 6** Remove the tenon cover from the body.

- 7** With your right thumb, gently press down the 2 end keys on the foot joint.



- 8** With a gentle twisting motion, insert the body tenon into the foot joint. Line up the key post with the middle of the body keys.



Your flute is now assembled and ready for playing.

CLEANING YOUR FLUTE

ALWAYS CLEAN the flute when you are finished playing:

- 1** Use a 6" x 6" piece of clean, dry cotton cloth (not included). Insert one corner of the cloth into the hole at the end of the tuning rod. Pull 2 inches of the cloth through the hole and wrap the rest around the rod.



- 2** Clean each joint individually by inserting the rod and twisting.



- 3** Wipe the outside of the flute with the cleaning cloth.

FIRST ACT[®] SERVICE PROGRAM

- Limited Lifetime Warranty covering both parts & labor
- Free parts for repair technicians
- Nationwide repair network
- Instrument to borrow during servicing
- First Act Service Team (FAST) Hotline:
1-866-710-FAST (3278)



FIRST ACT

745 Boylston Street
Boston, MA 02116

toll free 1-866-710-FAST (3278)

e-mail info@firstact.com • www.firstact.com