

CYMBAL

At the top of the cymbal arm, remove the wing nut and the upper felt.

Place the cymbal down over the lower felt so that the side with the First Act logo is facing upwards.


C Replace the upper felt and wing nut and

tighten, leaving enough room for the cymbal to move during play.

TUNING THE DRUM

The diagram below shows in what order you should tighten the tension rods to tune your drum. Use the drum tuning key for this step.

Apply an equal amount of tension to each lug. Turn each tension rod 1/4 turn until the pitch and tone of the drum begin to sound.

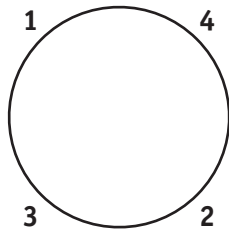


FD530
STAND AND JAM
 ASSEMBLY INSTRUCTIONS

.....
 Congratulations on your new Stand and Jam!

Customer Assistance
 Phone: 888.551.1115
 Email: info@firstact.com

First Act, the First Act logo, First Act Discovery, and the First Act Discovery logo are trademarks of First Act Inc.
 US Patent No. D516m116
 ©2006-2007 First Act Inc.
 All rights reserved.
 FD530.M.01

ASSEMBLY

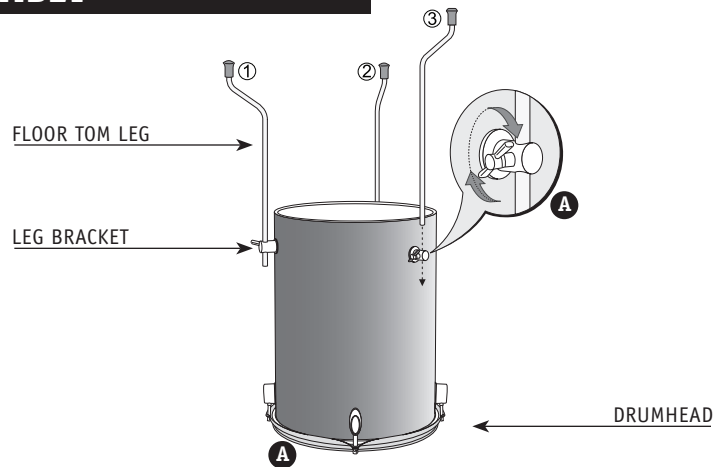

TOM


Set the drum on a soft floor surface, with the drum head side down and the open end facing up.

Remove the 3 floor tom legs and the cymbal arm from their packaging.

- A** Insert a floor tom leg into one of the

brackets on the side of the drum. Adjust height as necessary and tighten the wing nut to secure. Repeat this step for each of the legs.

Turn the drum over and stand it on its legs. You may need to re-adjust the legs so the drum sits evenly.

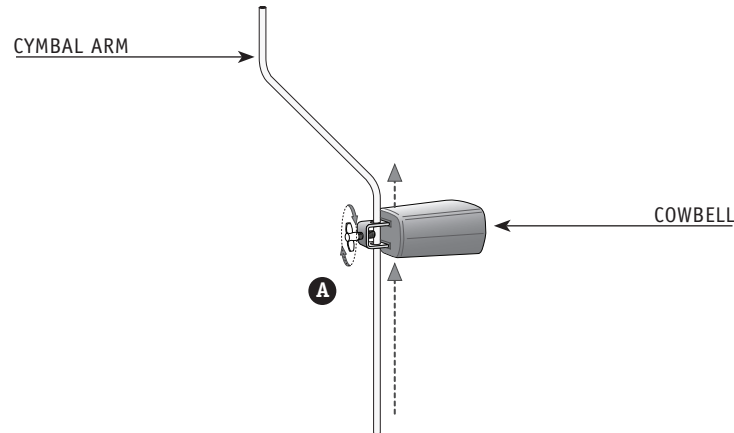

COWBELL

- A** Loosen the wing nut on the cowbell and slide it onto the straight end of the cymbal arm.
- B** Insert the straight end of the cymbal arm into the cymbal bracket, which is located closer to the drumhead than the leg brackets.

Tighten the wing nut to secure the cowbell about 1 inch from the bend in the cymbal arm.

Adjust height as necessary and tighten the wing nut to secure it.