



DORA the EXPLORER

Digital Drum Pad Instruction Manual

Congratulations on your new drum pad!
Please read this guide carefully before you begin playing.

Before You Play

Install Batteries

Batteries required: 4 x "AA" size (not included)

To Replace Batteries

1. Open the battery compartment cover with a screwdriver. Place the batteries in the compartment, be sure that (+) & (-) are in the correct positions.
2. Batteries must always be replaced by an adult. Never let a child use this product unless the battery door is secured.
3. Keep batteries away from small children.
4. Immediately and safely dispose of all used batteries.


Attention

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.

Important

The DEMO/PLAY switch is on the bottom panel of the drum pad. Switch to "PLAY" before use.

Playing The Drum

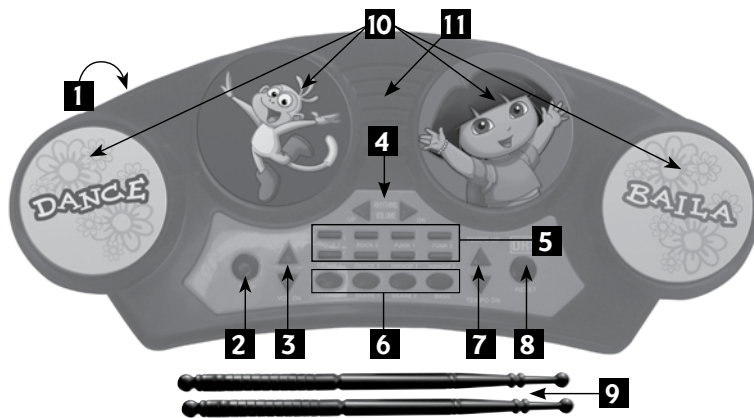

- 1. Demo/Play Switch**
The DEMO/PLAY switch is on the bottom panel of the drum pad. Switch to "PLAY" before use.
- 2. Stop**
Press STOP to stop all sounds.
- 3. Volume Up/Down**
Press VOLUME UP/DOWN buttons to adjust the drum volume.
- 4. Rhythm Volume**
Press RHYTHM UP/DOWN buttons to adjust the rhythm volume.
- 5. Rhythm Buttons**
Press any of the 8 RHYTHM buttons to select a rhythm.
- 6. Drum Sounds**
Press any of the 4 DRUM buttons to select a drum style.
- 7. Tempo Up/Down**
Press the TEMPO UP/DOWN buttons to speed up or slow down the tempo.
- 8. Reset**
Press the RESET button to stop all sounds and reset to original mode.
- 9. Drumsticks**
- 10. Drum Pads**
- 11. Speaker**

Important Safety Instructions

Please read this section carefully.

Read and follow these instructions.

1. Do not use this device near water.
2. Clean only with a dry cloth.
3. Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
4. Refer all servicing to qualified service personnel. Servicing is required when the drums have been damaged in any way, such as when liquid has been spilled on the drum, the drum has been exposed to rain or moisture, does not operate normally, or have been dropped.
5. To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the drum pad carefully to avoid damage to outer covering and inner components.

The drum pad should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Customer Assistance

Phone: 888.551.1115
Email: info@firstact.com

First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com

Nick.com
© 2009 Viacom International Inc.
All Rights Reserved.

Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.

No part of this publication may be reproduced in any form or by any means without the prior written permission of the Publisher.

Colors and specifications depicted on this guide may vary slightly from your product.

First Act, First Act Discovery, and the First Act Discovery logo are trademarks of First Act Inc.

© 2009 First Act Inc.
All Rights Reserved.

DE340.M.01